Aluminum PC Case Installation Guide

Case components:

Door key is attach to the accessory box

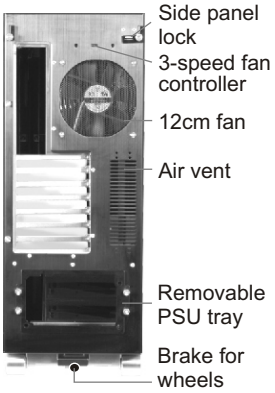

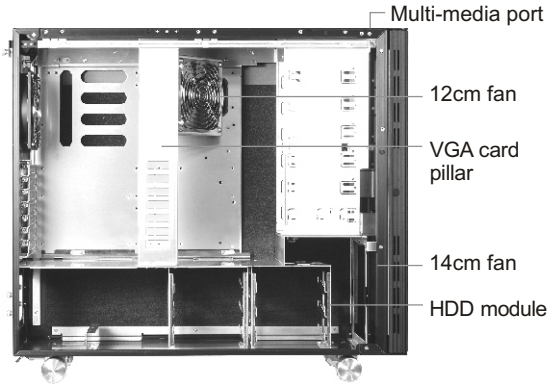

Side panels installation

Loose the screw and pull the latch to release the side panel.

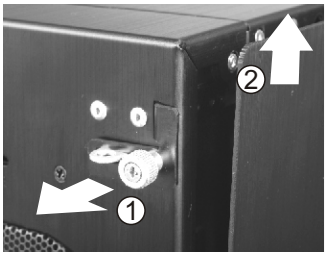

Remove the side panel.

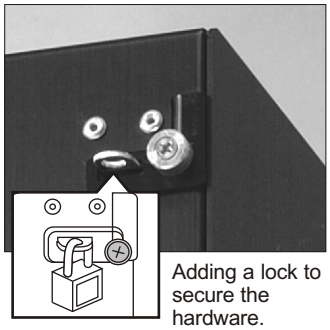

Adding a lock to secure the hardware.

Support liquid cooling system

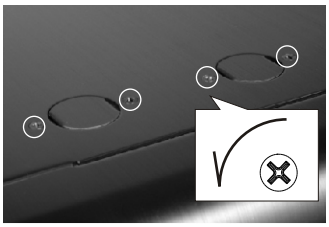

Loosen the screws to remove dust-free cover for water tube openings.

Remove mounting bracket

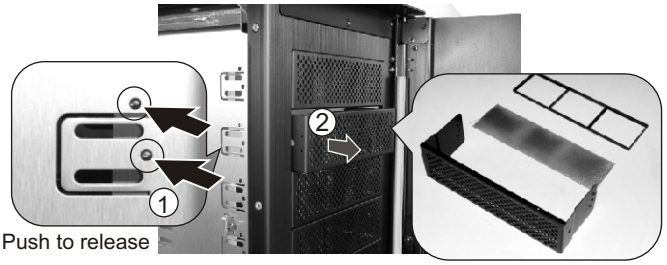

Push to release

Removable air filter

Removable fan filter

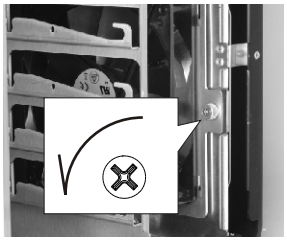

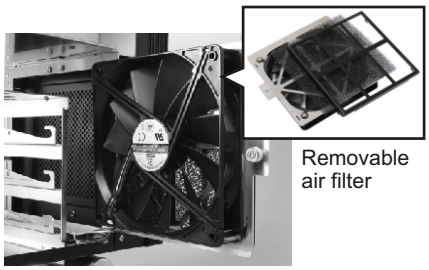

Loosing the two thumb screws on the fan module to release.

Hard disk installation

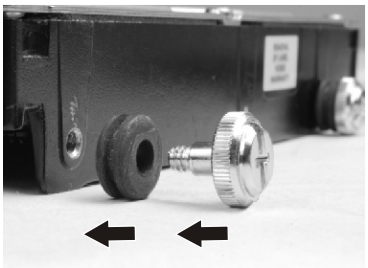

1. Fasten the HDD screws with anti-vibration rubber rings to the HDD.

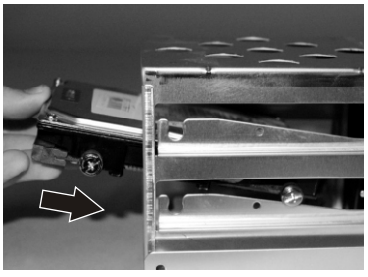

2. Slide the HDD into the HDD cage with the anti-vibration kit.

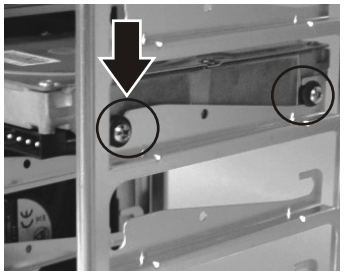

Press down the HDD into the slots to secure.

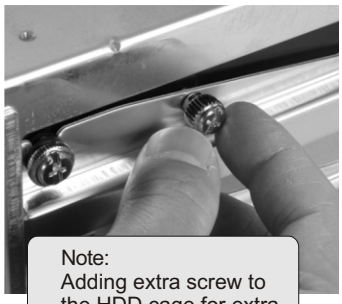

Note:
Adding extra screw to the HDD cage for extra security.

Hardware list

Buzzer(1)	Screw(56) to fix drive & motherboard	Thumb screw(26) & rubber ring(26) for fix HDD	Chip set cooler(1)+ themb screw(2) to mount on PCI card holder
Extension cable 12V(1) for power supply to M/B	Stand off bolt(16) for motherboard		
Power supply holder kit(2)	Mounting bracket (1) for SSI CEB/EEB	Nut(3) for stand off	Rubber protectors(4) for wheels
PCI card holder-S(3)	Screw driver(1) for stand off bolt	Thumb screw(1) spare part	
PCI card holder-L(4)	Thumb screw(6) for HDD extra fixing	Cable tie(3)	
Thumb screw(7) for PCI card holder	Screw (6) to fix power supply	Clamp(2) for cable management	

* Extra quantities are spare parts.

Motherboard installation

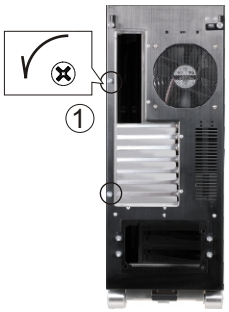

Loosing two thumb screws to release the M/B tray.

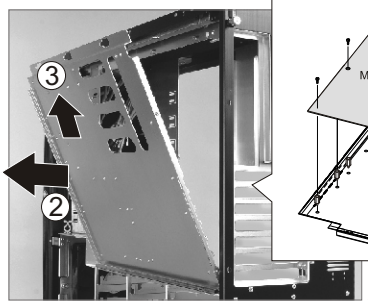

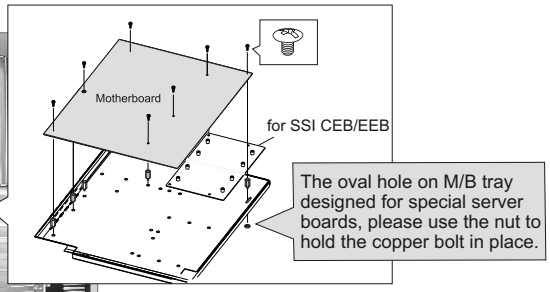
Motherboard
for SSI CEB/EEB
The oval hole on M/B tray designed for special server boards, please use the nut to hold the copper bolt in place.

Secure the stand off bolts on the M/B tray which match with the M/B fix points, place the M/B on the copper bolt, fasten the screws to secure.

3-speed fan adjustable device

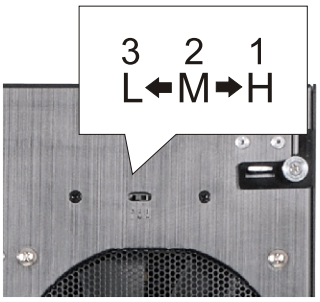

PSU tray installation

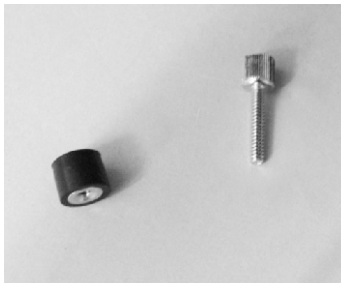

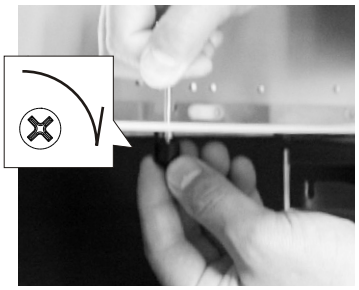

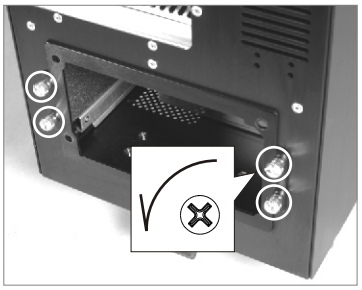

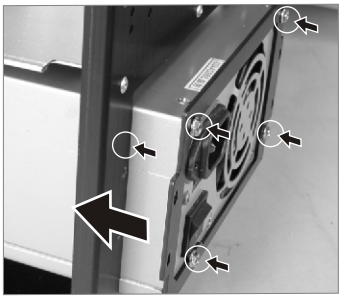

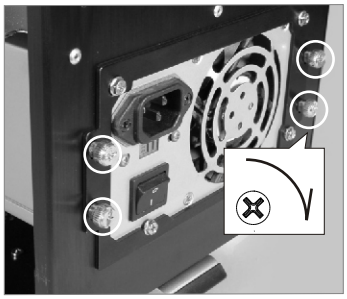

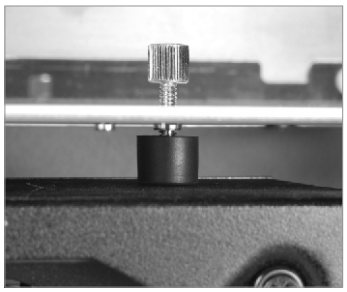

Extension cable for 12V PSU to M/B

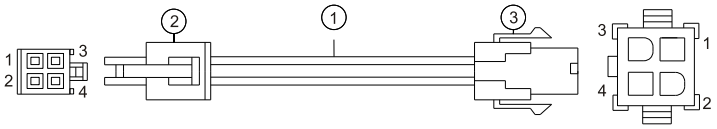

VGA Card Pillar Installation Guide

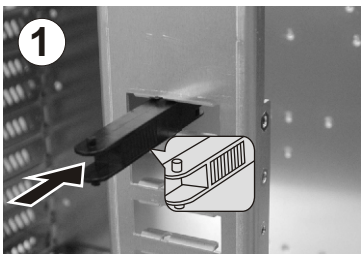

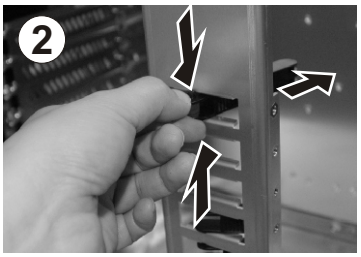

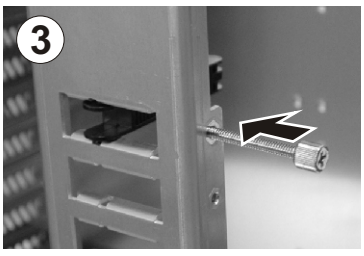

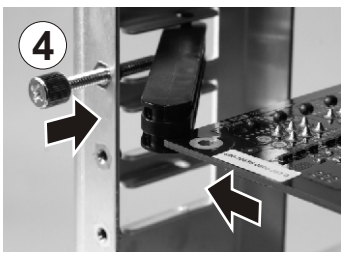

I/O Port installation

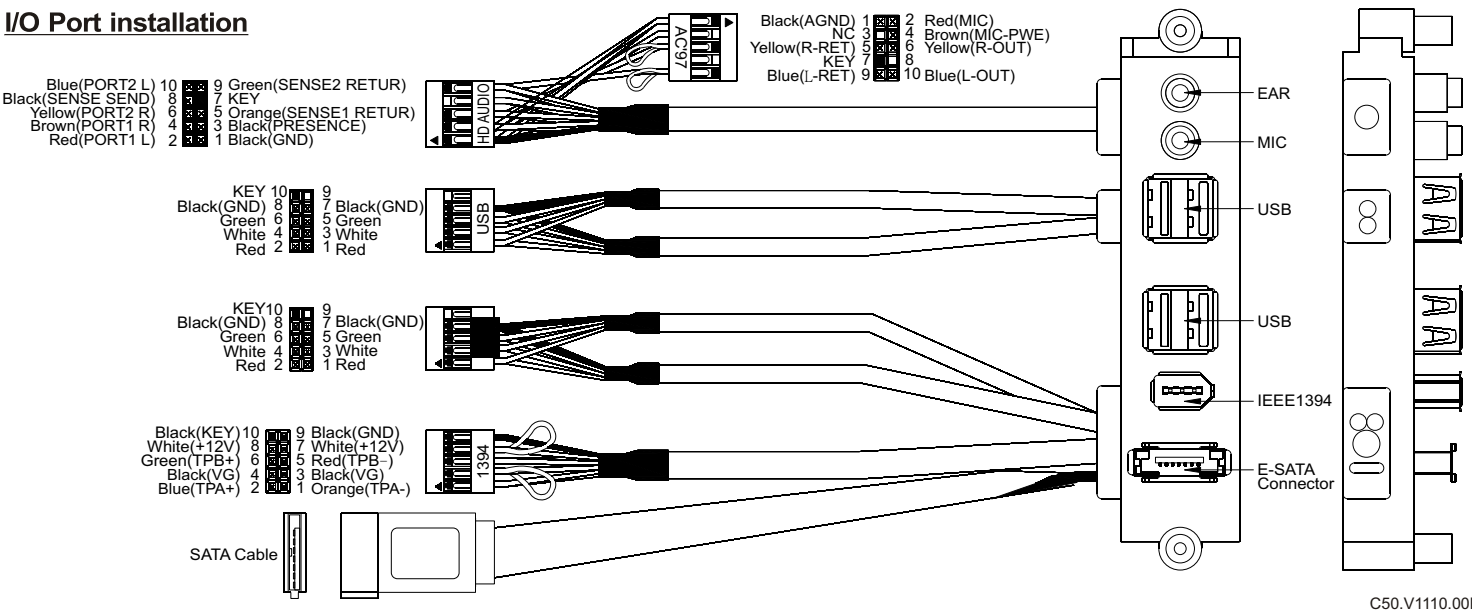

Chip set cooler installation

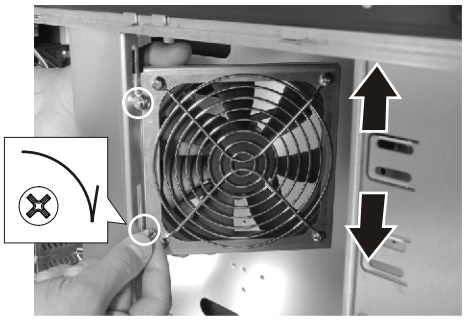

Aluminum wheel brake

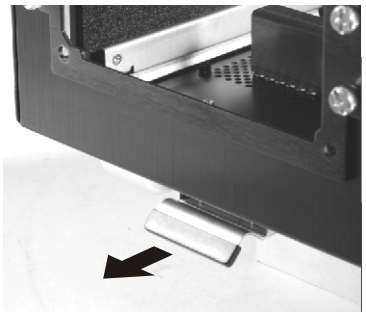

Rubber protector for aluminum wheels

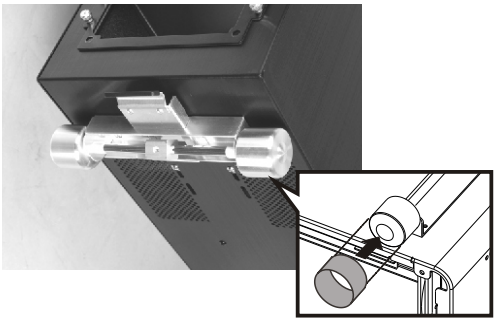

Adjustment for door swing direction

Loose the screws on the top panel plate as show in the image above.

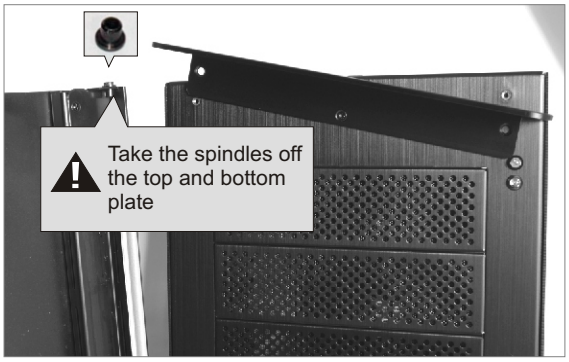

Remove the door, and place the door on a table top.

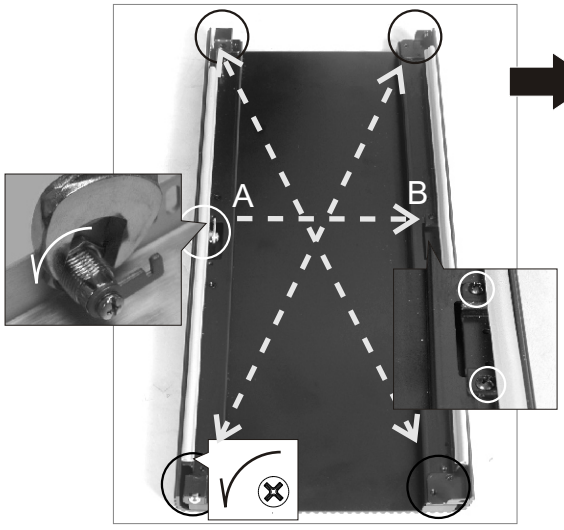

Swap the hinge and door stop as show as the image above

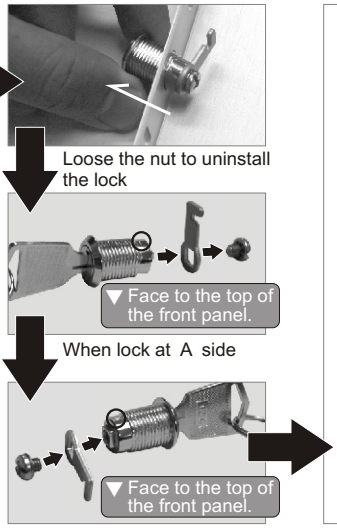

When lock at B side

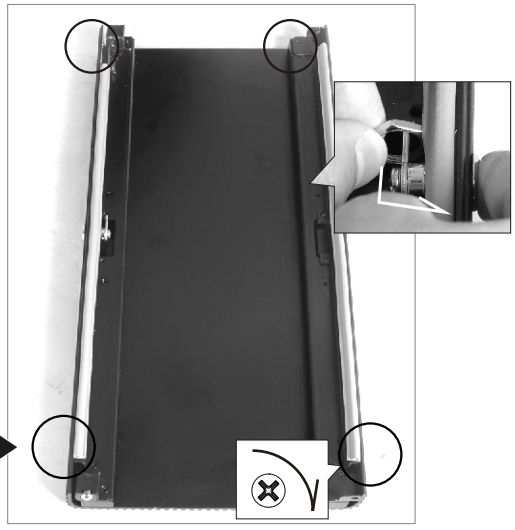

1. Secure all screws, and lock
2. Check the lock working mechanism swing the right direction

Reverse the step 2 and step 1 to secure the door panel.

Finish.